Autonics

DIGITAL PANEL METER **M5W SERIES**

М Α L U A



Thank you very much for selecting Autonics products. For your safety, please read the following before using.

Caution for your safety

*Please keep these instructions and review them before using this unit.

*Please observe the cautions that follow;

⚠ Warning Serious injury may result if instructions are not followed.

⚠ Caution Product may be damaged, or injury may result if instructions are not followed.

*The following is an explanation of the symbols used in the operation manual.

∆ caution:Injury or danger may occur under special conditions.

⚠ Warning


- 1. In case of using this unit with machineries (Nuclear power control, medical equipment, vehicle, train, airplane, combustion apparatus, entertainment or safety device etc), it requires installing fail-safe device, or contact us for information on type required. It may result in serious damage, fire or human injury.
- 2. It must be mounted on panel.

It may give an electric shock.

- 3. Do not repair or check up when power on.
- It may give an electric shock.
- 4. Please check the number of terminal when connect power line or measuring input. It may cause a fire.

!\ Caution

- 1. This unit shall not be used outdoors.
- It might shorten the life cycle of the product or give an electric shock
- 2. When wire connection for power input and measuring input, the tightening strength for screw bolt on terminal block should be over than 0.74N·m ~ 0.90N·m.
- It may result in malfunction or fire due to contact failure.
- 3. Please observe specification rating.
- It might shorten the life cycle of the product and cause a fire.
- 4. In cleaning the unit, do not use water or an oil-based detergent.
- It might cause an electric shock or fire that will result in damage to the product.
- 5. Do not use this unit at place where there are flammable or explosive gas, humidity, direct ray the sun, radiant heat, vibration, impact etc.
- It may cause explosion.
- 6. Do not inflow dust or wire dregs into inside of this unit.
- It may cause a fire or mechanical trouble.
- 7. Please connect properly after checking the polarity of measuring terminals. It may cause a fire or explosion.

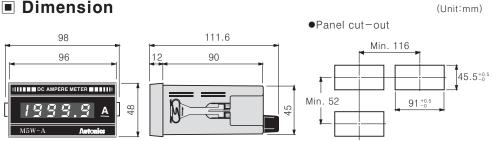


*The above specification are changeable without notice anytime.

Specification

Model		M5W-AV-□	M5W-DV-	M5W-AA-	M5W-DA-□	M5W-W-	M5W-T-	M5W-S-□	M5W-DI-		
Mov. ollass	voble input	Max. 400VAC	Max. 300VDC	Max. AC 5A	Max. DC 2A	Max. 10VDC		erator(0-10V)	DC4-20mA		
Max. allowable input		150% for each input specification (At 400VAC: 120%)									
Max. disp	lay range				Max.	1999					
Measurem	nent function	AC Voltage(RMS)	DC Voltage	AC Ampere (RMS)	DC Ampere	AC Watt	rpm	speed	Scale		
ower sup	oply				100-240VAC 50/60Hz	z(Option: 24-70VDC)					
Allowable	operation voltage				90 to 110% o	f rated voltage					
ower cor	nsumption	Approx	. 4VA		Approx. 5VA Approx. 4VA Approx. 5VA						
Display m	ethod				7Segment	LED Display					
Sampling	cycle				300	Oms					
A/D conve	ersion method				Dual slope in	tegral method					
Response	time				2sec.(0	to Max.)					
Sampling	times				2.5 tim	ies/sec.					
nsulation	resistance				Min. 100MΩ(at	500VDC megger)					
Dielectric	strength				2000VAC 50/60	Hz for 1 minute					
Noise stre	ength			±1kV the	square wave noise(puls	e width:1 μ s) by the nois	e simulator				
Vibration	Mechanical	0.75mm amplitude at frequency of 10 to 55Hz in each of X, Y, Z directions for 1 hour									
ribration	Malfunction	0.5mm amplitude at frequency of 10 to 55Hz in each of X, Y, Z directions for 10 minutes									
Shock	Mechanical	300m/s² (Approx. 30G) 3 times at X, Y, Z direction									
SHOCK	Malfunction	100m/s² (Approx. 10G) 3 times at X, Y, Z direction									
Environ	Ambient temperature	0 to 50℃, Storage temperature: -25 to 65℃									
-ment	Ambient humidity	35 to 85%RH, Storage humidity: 35 to 85%RH									
Display ac	ccuracy			DC: F	.S. $\pm 0.2\%$ rdg ± 1 Digit	, AC: F.S. $\pm 0.5\%$ rdg =	±1Digit				
Weight		Approx. 172g									

*Environment resistance is rated at no freezing or condensation.

Ordering information

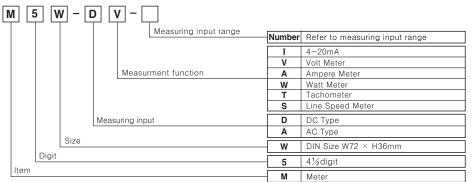


Measuring input range


Range Model	Blank	1	2	3	4	5	6	7	8	Х
AV		199.99mV	1.9999V	19.999V	199.99V	400.0V	_	_	_	Option
AA		19.999mA	199.99mA	1.9999A	19.999A	199.99A	1999.9A	-	_	Option
DV	-	199.99mV	1.9999V	19.999V	199.99V	300.0V	İ	ı	_	Option
DA	-	199.99µA	1.9999mA	19.999mA	199.99mA	1.9999A	19.999A	199.99A	1999.9A	Option
W	-	_	1.9999kW	19.999kW	199.99kW	1999.9kW	ı	İ	-	Option
Т	-	19999rpm	19999rpm		C measuremen C measuremen					
S	-	19999m/min	19999m/min		ent input exce					
DI	19999	Option (Displa	ay:0 to 19999)							Option

- ※1: When the output of power converter is 10VDC, measuring input value is maximum. In case that output is DC4-20mA, scaling meter should be used.
- *2: 1-5VDC measuring input is optional *Power converter should be used with Watt meter and Tachometer/Line speed meter should be used with Tacho-

Connection

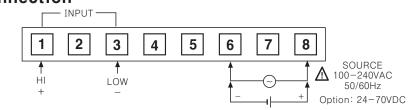

General block diagram

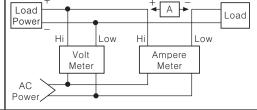


※A: When measure over DC 2A, please use Shunt and measure over AC 5A, please use C.T.

(Current Transforme	er).
When measure over AC5A	When measure over DC2A
Hi	+ U Low

Caution for using

- Please use the terminal (Pitch: 7.2mm max.) when connecting the AC power supply
- 2. Please use separated line from high voltage line or power line in order to avoide inductive noise.
- 3. Please use power switch or circuit breaker in order to turn OFF the power
- 4. The switch or circuit breaker should be installed near by users for safety.
- 5. Be sure to avoid using this unit near by machinery makes strong high frequency noise (Welding machine, high capacity SCR unit etc.)
- 6. When input applied, if "19999" or "19999" are displayed, it has some trouble with measuring input, please check the line after power off
- Noise inflow from power line can be serious problem for products driving of D.P.M.(Digital panel meter) by AC power. Even though there is condenser for protecting noise between lines in power transformer, but this display unit as small size product, it is very difficult to install protection components. Therefore, please install line filter, varistor or noise absorber in external lines when voltage failure occurred by power relay or magnet S/W operation, spark with high voltage.

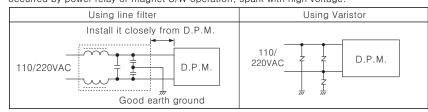

8. Input line: Shield wire must be used when the measuring input line is getting longer or there are lots of



1 It shall be used indoor ③Pollution Degree 2

②Altitude Max. 2000m 4 Installation Catergory II

*It may cause malfunction if above instructions are not followed.

Main products

■Proximity sensors ■Photoelectric sensors ■Area sensors Fiber optic sensors

■Door/Door side sensors ■Pressure sensors

Ounters

- ■Rotary encoders ■Display units
- ■Power controllers
- ■Sensor controllers
- anel meters
- ■Graphic/Logic panels
- ■Temperature controllers
- ■Tachometer/Pulse(Rate) meters
- ■Temperature/Humidity transducers
- ■Switching power supplies
- ■Stepping motors/drivers/motion controllers
- Field network devices ■Laser marking system(CO₂, Nd:YAG)
- ■Laser welding/soldering syste

Autonics Corporation

http://www.autonics.com Satisfiable Partner For Factory Automation

■HEAD QUARTERS

41-5, Yongdang-dong, Yangsan-si, Gyeongnam, 626-847

■OVERSEAS SALES :

Bldg. 402 3rd Fl., Bucheon Techno Park, 193, Yakdae-dong, Wonmi-qu. Bucheon-si. Gyeonggi-do. 420-734. Korea TEL:82-32-610-2730 / FAX:82-32-329-0728

■E-mail: sales@autonics.com

The proposal of a product improvement and development : product@autonics.com

EP-KE-04-0090C